

NAIL DRILL MACHINE M5

Model: M5

Certificate No.: TST20230740022-3RC, FCSR20230614201, FCSR20230614202

TECHNICAL DATA:

Power: 68W

Nominal input: 110-220V AC 50/60 Hz

Nominal output: 12V DC

Rotation speed: 35000 RPM

1. SAFETY OF USE:


1. Please read the instruction manual carefully before use.
2. Remember that the actual voltage used must correspond to the parameters of the nail drill machine.
3. When changing nail drill bits, make sure the bit is fully inserted into the head. An improperly inserted nail drill bit can cause vibrations or bit falling out of the head during operation.
4. Do not close the nail drill bits holder without inserting the bit, otherwise it will be very difficult to open it again. When the head is not in use, it should have a nail drill bit in it.
5. Do not open the handle on the nail drill bits during the work of the nail drilling machine. Before changing the nail drill bit, turn off the power to the device.
6. Change the rotation speed of the controller gradually.
7. Do not use the device in a humid/wet space and when the air humidity level reaches high values.
8. Do not place the nail drill machine near heating appliances, candles, open flames or cigarettes.
9. Do not use the device near flammable substances.
10. If the device vibrates excessively or makes unusual noises, discontinue use.
11. If you are not using the device, remember to always unplug the power cable from the socket.
12. Do not use the nail drill machine if the power cord, plug or socket are damaged. Using a damaged device can cause fire or electric shock.
13. Do not allow the nail drill head to be dropped or damaged. In case of malfunction, do not use the device and contact the service technician.
14. The device may cause injury or loss of property if the instructions are not followed user manual.
15. Rational use and proper maintenance can extend the life of your nail drill machine.
16. The manufacturer and distributor are not responsible for accidents caused by failure to follow the instructions for use.
17. Keep out of reach of children.

2. THE SET INCLUDES:

- Nail drill machine
- Nail drill head
- Set of cutters
- Foot pedal
- User manual
- Warranty card

3. CHARACTERISTICS OF THE DEVICE:

1. Display *1000 RPM
2. ON/OFF button, R/F rotation
3. HAND/FOOT button
4. Nail drill head
5. Rotation speed knob
6. Synchronize display of current speed
7. Foot pedal input socket
8. Power cord input socket
9. Nail drill head input socket
10. Head holder

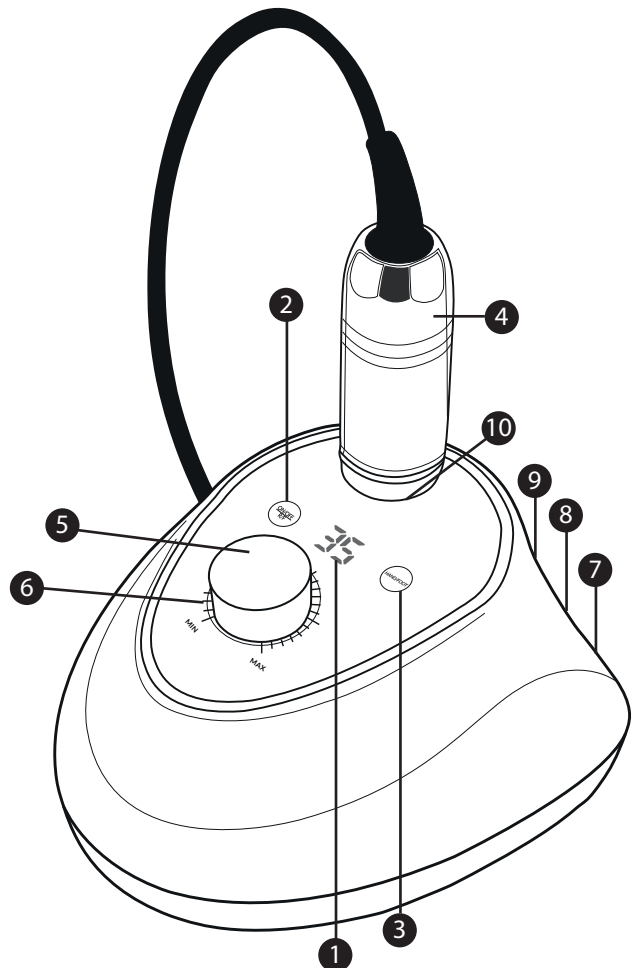

4. HOW TO USE:

1. Connect the power cord to the socket.
2. Connect the nail drill head to the appropriate input in the device.
3. Press and hold the ON/OFF button to turn on the device. To switch forward or reverse rotation, press and hold the R/F switching button for a short time (Figure 2).
4. Turn the knob to set the optimal speed for work. Turning to the right increases the speed in the range of 0-35000 PRM, turning to the left slows it down.
5. The number of revolutions is displayed as a numerical value *1000 (Figure 1).
6. Switch the HAND/FOOT mode with the button depending on the need for work (Figure 3).
7. If you are not using the device, remember to always unplug the power cable from the socket.

5. DIRECTIONS:

1. Remember to connect the device to a socket with a voltage that is suitable for the device's requirements.
2. Keep out of reach of children.
3. Keep the workplace clean.
4. Remove dust from the head regularly with isopropyl alcohol, avoiding wetting the inside of the head.
5. Avoid moisture.
6. Avoid strong sunlight of the device, so as not to overheat it.
7. If you do not use the device for a long time, unplug the power plug and store the equipment in a ventilated, dry place.



In accordance with art. 13 sec. 1 of the Act of 11 September 2015 on used electrical and electronic equipment (Journal of Laws 2015 item 1688), we inform you about the correct handling of waste electrical and electronic equipment:

1. It is prohibited to place used electrical and electronic equipment together with other waste - this is confirmed by the marking in the form of a "crossed-out bin", which requires selective collection of this type of waste.
2. Electrical and electronic devices may contain hazardous substances, mixtures and components, which, after entering the environment, may pose a serious threat to the health and life of humans and living organisms.
3. Used electrical and electronic equipment should be transferred only to authorized collection points, the list of which should be included on the website of each Municipal Office.
4. Households play a key role in the waste management system for used electrical and electronic equipment due to the possibility of their direct transfer to authorized collection points and the elimination of undesirable social habits resulting in leaving waste equipment in places not intended for this purpose.

IMPORTER

Made in PRC