

DESK LAMP HQ-75

SAFETY INSTRUCTIONS:

1. Before use, carefully read this instruction manual to ensure proper operation.
2. Do not disassemble or modify the product on your own. Any unauthorized modification will void the warranty.
3. Connect the lamp only to a suitable power outlet 100-240V, 50/60Hz.
4. Do not use chemical cleaning agents to clean the lamp.
5. Do not clean the lamp under running water.
6. Do not cover the lamp with paper, fabric, or any other materials, as this may cause overheating or fire.
7. To prevent serious damage, protect the lamp from falling or impact.
8. Store the product away from humid environments and high temperatures.
9. Do not dispose of the lamp in fire.
10. Do not touch the lamp with wet hands.
11. Failure to follow these instructions may result in fire, burns, electric shock, physical injury, or material and non-material damage.
12. Keep out of reach of children.

USAGE GUIDELINES:


1. Clean the lamp only with a soft, dry cloth.
2. Do not use chemical cleaning agents.
3. Do not cover the lamp with fabric, paper, or other materials.
4. Ensure proper air circulation around the lamp.

DANE TECHNICZNE:

Model: HQ-75X
Certificate No.: HTT202311017E
Power: 35W
Rated input: AC 100-240V 50/60Hz
Rated output: DC 24V 2A

PACKAGE CONTENTS:

- Lamp body
- Iron base (2 pcs)
- Power cable
- Screwdriver
- Mounting screws (4 pcs)
- User manual
- Warranty card

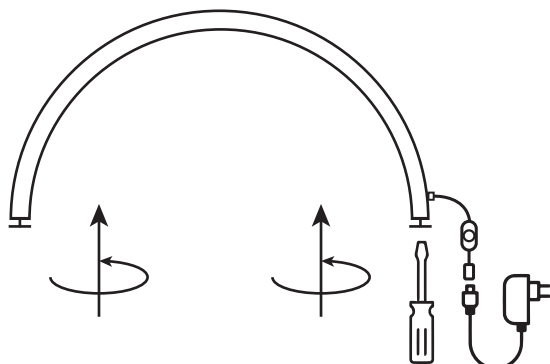

ASSEMBLY INSTRUCTIONS:

1. Carefully open the package.
2. Connect the lamp to a 100-240V power outlet.
3. Use the screwdriver to attach the iron base to the lamp body.
4. Cover the iron base with the rubber pads.
5. Connect the power cable.
6. Briefly press the ON/OFF touch button to turn the lamp on.

OPERATING INSTRUCTIONS:

1. Secure the lamp on the work desk and connect it to the power supply.
2. Briefly press the ON/OFF button to turn the lamp on. Short presses allow you to change the light color temperature (2700K / 4000K / 6500K) or turn the lamp off.
3. Press and hold the ON/OFF button to adjust the brightness. Release the button once the desired brightness level is reached.
4. The lamp features a memory function - it will retain the previously selected brightness and mode when turned on again.



In accordance with art. 13 sec. 1 of the Act of 11 September 2015 on used electrical and electronic equipment (Journal of Laws 2015 item 1688), we inform you about the correct handling of waste electrical and electronic equipment:

1. It is prohibited to place used electrical and electronic equipment together with other waste - this is confirmed by the marking in the form of a "crossed-out bin", which requires selective collection of this type of waste.
2. Electrical and electronic devices may contain hazardous substances, mixtures and components, which, after entering the environment, may pose a serious threat to the health and life of humans and living organisms.
3. Used electrical and electronic equipment should be transferred only to authorized collection points, the list of which should be included on the website of each Municipal Office.
4. Households play a key role in the waste management system for used electrical and electronic equipment due to the possibility of their direct transfer to authorized collection points and the elimination of undesirable social habits resulting in leaving waste equipment in places not intended for this purpose.

IMPORTER

Made in PRC